


Mooney™ FlowMax™ HP Regulator

Instruction Manual

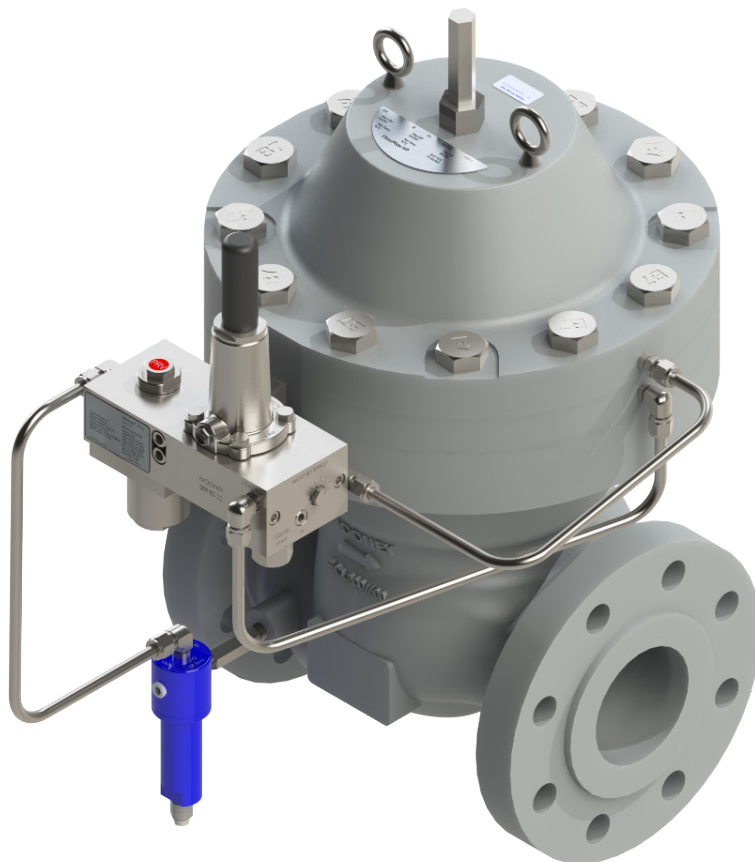

THESE INSTRUCTIONS PROVIDE THE CUSTOMER/OPERATOR WITH IMPORTANT PROJECT-SPECIFIC REFERENCE INFORMATION IN ADDITION TO THE CUSTOMER/OPERATOR'S NORMAL OPERATION AND MAINTENANCE PROCEDURES. SINCE OPERATION AND MAINTENANCE PHILOSOPHIES VARY, BAKER HUGHES COMPANY (AND ITS SUBSIDIARIES AND AFFILIATES) DOES NOT ATTEMPT TO DICTATE SPECIFIC PROCEDURES, BUT TO PROVIDE BASIC LIMITATIONS AND REQUIREMENTS CREATED BY THE TYPE OF EQUIPMENT PROVIDED.

THESE INSTRUCTIONS ASSUME THAT OPERATORS ALREADY HAVE A GENERAL UNDERSTANDING OF THE REQUIREMENTS FOR SAFE OPERATION OF MECHANICAL AND ELECTRICAL EQUIPMENT IN POTENTIALLY HAZARDOUS ENVIRONMENTS. THEREFORE, THESE INSTRUCTIONS SHOULD BE INTERPRETED AND APPLIED IN CONJUNCTION WITH THE SAFETY RULES AND REGULATIONS APPLICABLE AT THE SITE AND THE PARTICULAR REQUIREMENTS FOR OPERATION OF OTHER EQUIPMENT AT THE SITE.

THESE INSTRUCTIONS DO NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE CUSTOMER/OPERATOR'S PURPOSES THE MATTER SHOULD BE REFERRED TO BAKER HUGHES.

THE RIGHTS, OBLIGATIONS AND LIABILITIES OF BAKER HUGHES AND THE CUSTOMER/OPERATOR ARE STRICTLY LIMITED TO THOSE EXPRESSLY PROVIDED IN THE CONTRACT RELATING TO THE SUPPLY OF THE EQUIPMENT. NO ADDITIONAL REPRESENTATIONS OR WARRANTIES BY BAKER HUGHES REGARDING THE EQUIPMENT OR ITS USE ARE GIVEN OR IMPLIED BY THE ISSUE OF THESE INSTRUCTIONS.

THESE INSTRUCTIONS ARE FURNISHED TO THE CUSTOMER/OPERATOR SOLELY TO ASSIST IN THE INSTALLATION, TESTING, OPERATION, AND/OR MAINTENANCE OF THE EQUIPMENT DESCRIBED. THIS DOCUMENT SHALL NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT THE WRITTEN APPROVAL OF BAKER HUGHES.

Table Of Contents

| | |
|---|----|
| Product Description | 1 |
| Principles of Operation | 2 |
| Nameplate Information..... | 3 |
| Regulator Markings | 3 |
| Cross section graphic and part descriptions | 4 |
| Installation..... | 4 |
| Piping Schematics..... | 5 |
| Start-up and Operation | 10 |
| Maintenance..... | 13 |
| Bolt Torque Specifications | 20 |
| Troubleshooting | 20 |

Scope

This manual provides instructions for the Installation, Operation, and Maintenance of the Mooney FlowMax HP Regulator (instructions for the standard FlowMax and the Series 22 Pilot can be found in separate manuals). This manual is divided into the following sections:

Product Description

The Mooney FlowMax HP is an easy to maintain regulator designed to be used with a self-contained pilot system. The Mooney FlowMax HP regulator has several unique features that add to its versatility, such as:

- In-line maintenance
- A single maximum pressure rating for all components
- One actuator for all pressures and differentials
- A compact, low-volume actuator housing for quick response
- Top-entry design
- Maximum flow at a low differential
- Increased closing force with an increase in inlet pressure

| Materials of Construction | |
|---------------------------|------------------------|
| Body | ASTM A 216 WCB Steel |
| Actuator Housing | ASTM A 516 Gr 70 Steel |
| Plug Seal | Nitrile |
| Diaphragm | Nitrile/Nylon |
| O-Ring & Seals | Nitrile |
| Bolting | ASTM B7 |
| Spring | Music Wire |
| Trim | Stainless Steel |
| Seal Pack Housing | Stainless Steel |

Table 1 - Materials of Construction

| Specifications | Imperial | Metric |
|--------------------------------------|---|---|
| Sizes | 2,3,4, and 6 inch | DN 50, DN 80, DN 100, DN 150 |
| Body Style | Single Port | Single Port |
| End Connections | 300 CL RF, 600 CL RF | Flanged |
| Temperature Working Emergency | -20°F to 150°F -40°F to 175°F | -29°C to 66°C -40°C to 80°C |
| Maximum Operating Differential | 1300 psi | 90 bar |
| Maximum Casing Pressure | 1480 psi | 102 bar |
| Minimum Differential (Fully Open) | 12 psi | 0.83 bar |
| Outlet Pressure Range | Series 22: 3 - 900 psi | 0.21 - 62 bar |
| Maximum Inlet Pressure | 1480 psig (limited by flange or pilot rating) | 102 bar (limited by flange or pilot rating) |
| Pilot Supply Body Tap | Two 1/4" - 18 NPTF | Two 1/4" - 18 NPTF |
| Sense Line Tap | Three 1/4" - 18 NPTF | Three 1/4" - 18 NPTF |

Table 2 - Specifications

Principle of Operation (Refer to Figure 1)

When the downstream pressure is greater than the set point of the pilot, the pilot is closed, resulting in equal pressure above and below the main diaphragm. With a balancing plug area slightly larger than the seat area, the resulting closing force, along with the force of the main spring, forces the plug against the seat.

With an increase in demand, the outlet pressure will begin to drop and decrease the pressure above the main diaphragm. A drop of outlet pressure below the pilot set point will cause the pilot to open.

As the pilot opens, pressure increases underneath the main diaphragm faster than pressure can bleed through the restrictor. The imbalance in pressure on the main diaphragm overcomes the spring force and the additional closing force from the balanced plug, causing the plug to rise off the seat and satisfy the flow demand.

Once the flow demand is satisfied and the downstream pressure begins to increase, the pressure above the main diaphragm and in the pilot sense cavity rises. This causes the pilot to close. The pressure below the main diaphragm bleeds through the restrictor until pressure equalizes above and below the main diaphragm. The forces of the main spring and the balanced plug then close the plug on the seat.

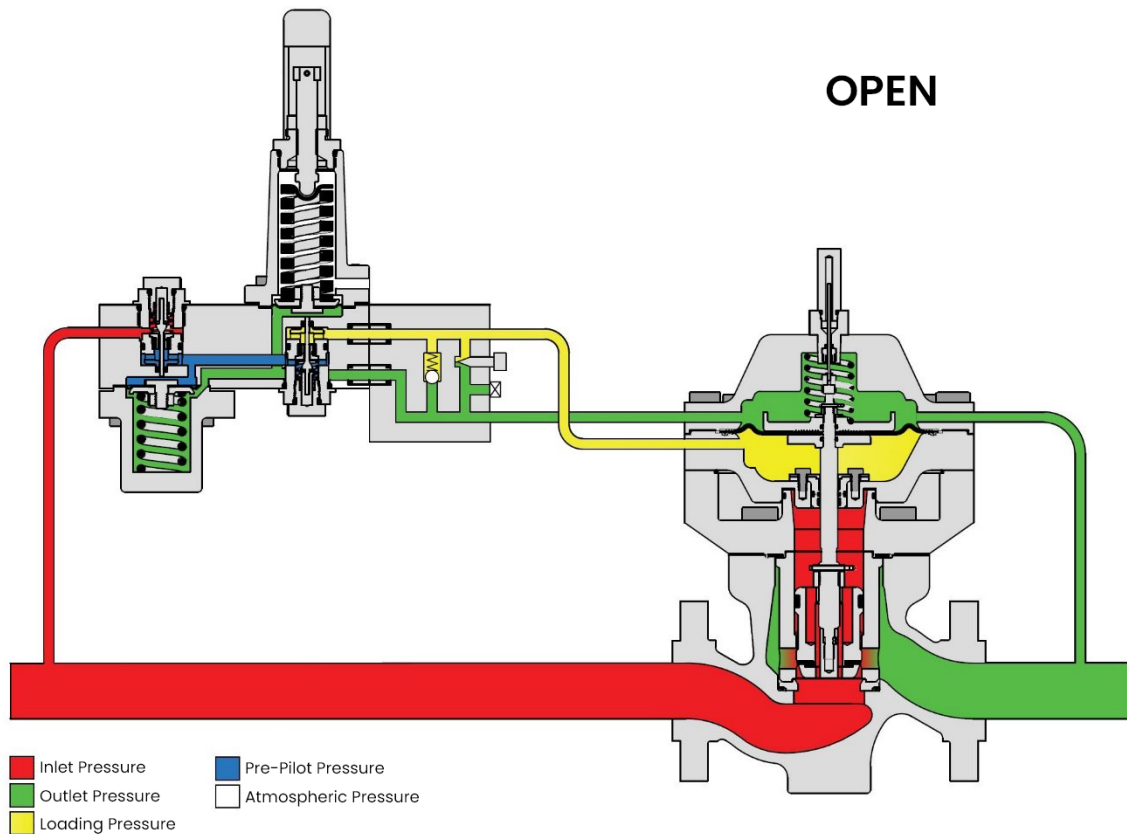


Figure 1 - Typical Pressure Reducing Regulator Flow Schematic

Nameplate Information

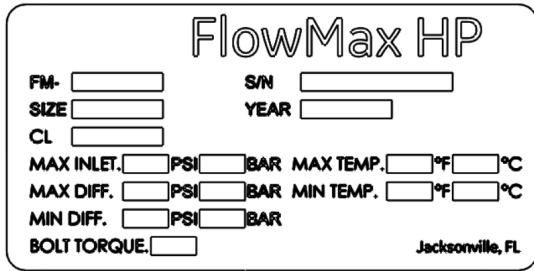


Figure 2 - Nameplate

| Item | Definition |
|-------------------|---|
| FlowMax HP | Trademarked name |
| FM | FlowMax product identification |
| S/N | Serial number assigned to regulator |
| Size | Line size of body |
| Year | Date of manufacture |
| CL | Pressure rating class |
| Max Inlet | Maximum inlet pressure psi/bar |
| Max. Differential | Maximum allowable differential pressure |
| Min. Differential | Minimum differential required to fully open regulator |
| Max. Temperature | Maximum operating temperature in degrees Fahrenheit/Celsius |
| Min. Temperature | Minimum operating temperature in degrees Fahrenheit/Celsius |
| Bolt Torque | Torque requirement of actuator bolts |

Regulator Markings

Regulator Marking

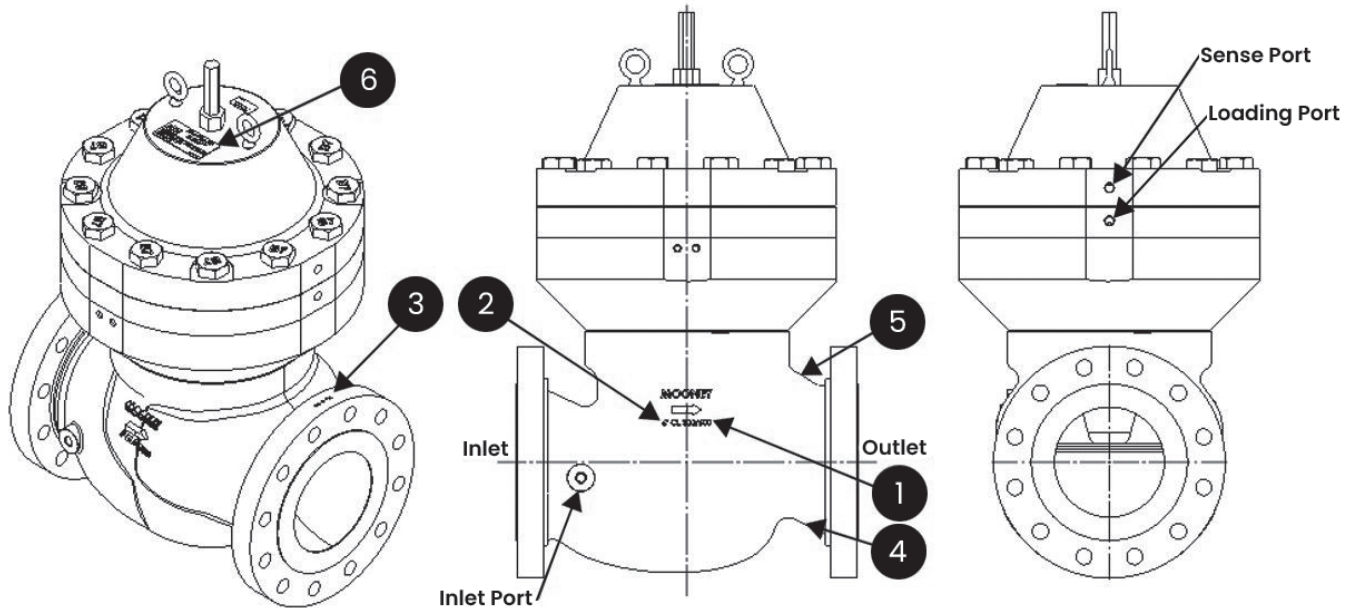


Figure 3 - Regulator Markings

1. American National Standards Institute (ANSI) pressure class rating of the regulator.
2. Line size of body.
3. ANSI pressure class rating of the flange.
4. Indication that the regulator has been hydrostatically tested according to code requirements.
5. The Serial Number is stamped on the Body.
6. The Nameplate location.
7. Cage Identifier (not shown - generally attached as a bolt tag)

Hydrostatic Testing

WARNING

Installation and testing of the FlowMax HP Regulator should be made by trained, qualified personnel familiar with high pressure piping and pilot operated regulators.

All FlowMax HP regulators are hydrostatically tested at the factory prior to shipment according to ISA-S75.19 and EN 334 standards. If it is necessary to retest the Regulator body, follow the procedures listed below.

Note: This Procedure applies to the regulator body only. If actuator retesting is required, contact the factory for proper procedures.

1. Disconnect and remove the pilot inlet, actuator sense control line(s) and loading lines.
2. Remove the body-to-actuator bolts and remove the actuator and pilot.
3. Plug the pilot supply line in the regulator body or, if applicable, the pilot filter.
4. Plug the flange/actuator mounting surface on the body.

Note: A plug for hydrostatically testing the Body is available from the factory.

6. Pressurize the system to the required maximum hydrostatic pressure.
7. After the hydrostatic test is completed and the body is dry and clean, follow the assembly procedures in the maintenance section of this manual.

Installation

WARNING

Personal injury, equipment damage, or leakage due to explosion of accumulated gas or bursting of pressure containing parts may result if this regulator is over pressured or is installed where service conditions could exceed the limits given in the specification of this manual or on the nameplate, or where conditions exceed any ratings of the adjacent piping or piping connections. Verify the limitations of both regulator and pilot to ensure neither device is over pressured. To reduce the chances of such injury or damage, provide pressure relieving or pressure limiting devices (as required by the U.S. code of Federal Regulations, by the National Fire Codes of the National Fire Protection Association, or by other applicable codes) to prevent service conditions from exceeding those limits. Additionally, physical damage to the regulator, pilot, or tubing can cause personal injury and/or property damage due to explosion of accumulated gas. To reduce the chances of such injury and damage, install the regulator in a safe location.

1. **Personnel:** Installation of the FlowMax HP regulator should be performed by trained, qualified personnel familiar with high-pressure piping and pilot-operated regulators.
2. **Prior Inspection:** Inspect the main regulator, pilot, and tubing for any damage that might have occurred in shipping. Make sure the body, pilot sense lines, and piping are clear and free of foreign material.
3. **Flanged End Regulators:** Use suitable line gaskets and good bolting practices with flanged bodies. Incremental tightening of the line bolts in a crisscross pattern is recommended.

WARNING

Gas regulators installed in confined or enclosed spaces should be provided with adequate ventilation to prevent the possibility of gas buildup or accumulation from leaks and venting. Leaks or vented gas may accumulate causing personal injury, death, or property damage. Pilot spring cases and the regulator enclosure should be vented to a safe area away from air intakes, or any hazardous location. The vent lines and stacks must be protected against condensation and clogging.

4. **Orientation:** The FlowMax HP regulator may be installed in any position – the best position being the one that provides easiest access for pilot adjustment and general maintenance.
5. **Control Lines:** Control (sense) lines should be run from the FlowMax HP actuator to a point at least 8 to 10 pipe diameters downstream from the regulator (refer to piping schematics). Use Table 4 as a guide for the ideal tubing size to use. Reduce as necessary to connect the actuator.

| Outlet Pressure | | |
|-----------------------|------------------------------|-------------------------------|
| Pilot Regulator with: | 2 to 5 psi (0.14 - 0.35 bar) | Greater than 5 psi (0.35 bar) |
| Static Sense Line | 1/2" Tubing | 3/8" Tubing |
| Sense Line with Flow | 1/2" Tubing | 1/2" Tubing |

Table 3 - Outlet Pressure

Note: The control line connection should be away from areas of turbulence (such as valves, reducers, and elbows) and should have a full opening into the pipe free from burrs, drill peels, and weld slag. Shut-off valves may be required in the control line(s), if installed, they should be of the full opening type. Gas velocity at the sense line connection should not exceed 100 ft/sec (30m/sec).

7. **Pilot Supply Lines:** Run a 3/8-inch or 1/2-inch pilot supply line from the upstream piping or from the Inlet port body connection on the side of the FlowMax HP regulator to the pilot Inlet port.
8. **A Filter** in the pilot supply line is recommended to remove particulates from the pilot supply that could affect the variable orifice in the pilot.

Note: A shut-off valve is not required in the pilot supply line, but if one is installed, it must be a full-opening type.
9. **Vent Valves and Gauge Connections:** Vent valves and gauge connections are recommended in the Inlet and actuator sense piping of the FlowMax HP regulator.
10. **Interstage Piping:** The recommended length of the interstage piping between monitor regulators is 6 pipe diameters or 36 inches (915 mm), whichever is greater. It is also recommended that the interstage piping be swaged up 1 pipe diameter over the nominal port size of the regulator for working monitor applications.

For example: A station with two 2" FlowMax HP regulators in a working monitor configuration should have interstage piping at least 36 inches (915 mm) in length and swaged up to a 3-inch pipe.

Piping Schematics

The following piping schematics are provided:


1. Single Regulator with Single Pilot.....Page 6
2. Stand-by Monitor (Monitor located downstream).....Page 7
3. Stand-by Monitor (Monitor located upstream)Page 8
4. Working Monitor set.....Page 9

All drawings show installations with the Series 22 Pilot. Consult factory for installation schematics of other manufacturer's pilot on the FlowMax HP regulator.

Piping Schematics (cont'd)

1. Single Regulator/Single Pilot (Pressure Reducing Regulator)

SINGLE REGULATOR
(PRESSURE REDUCING)

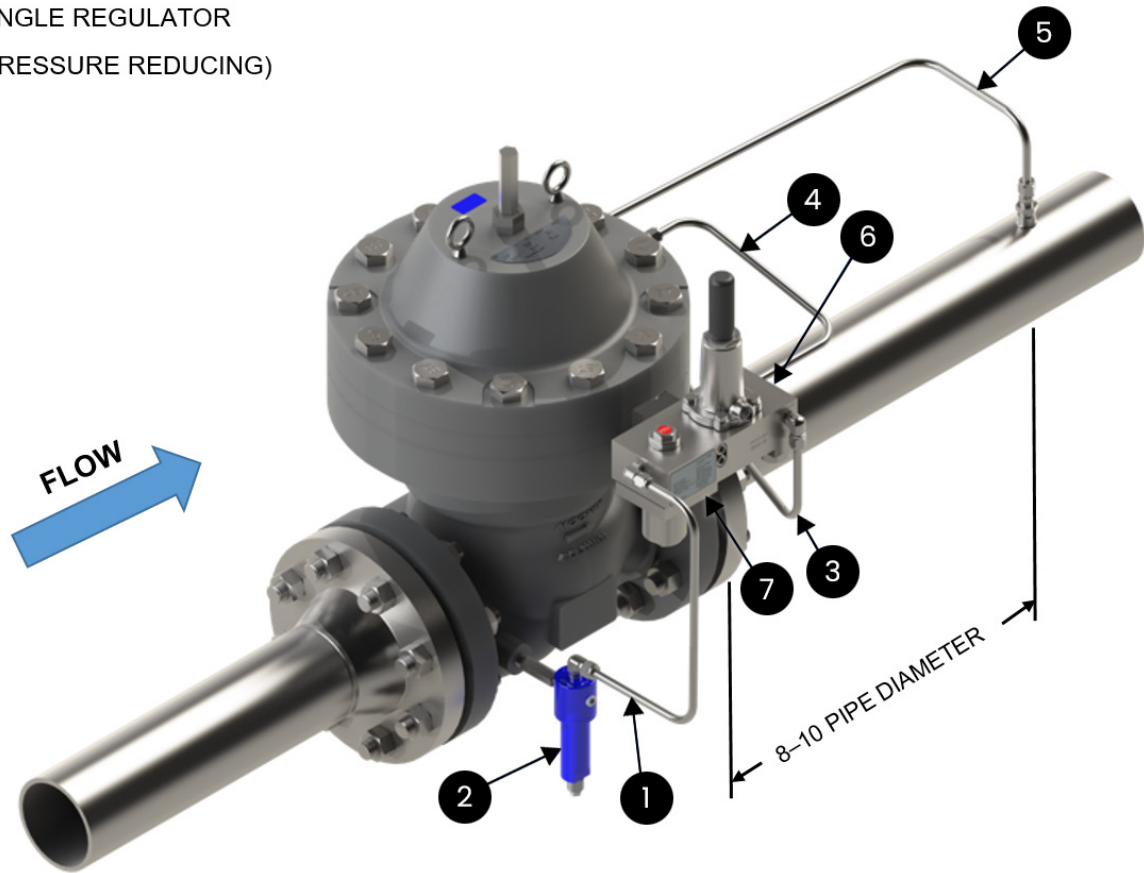


1. Pilot supply tubing from filter OUTLET connection to the Series 22 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. LOADING port of Series 22 pilot connected to Loading connection on the actuator housing of the FlowMax HP regulator
4. Sense line connecting the SENSE Port on the Series 22 pilot to the sense port on the FlowMax HP actuator.
5. Sense line connecting the FlowMax HP regulator to the downstream piping. (Refer to Table 4 on Page 5 for sense piping recommendations)
6. Series 22 pilot with pilot cartridge in PRV mode.

Piping Schematics (cont'd)

2. Stand-by Monitor (Monitor located downstream)


STANDBY MONITOR
(MONITOR DOWNSTREAM)

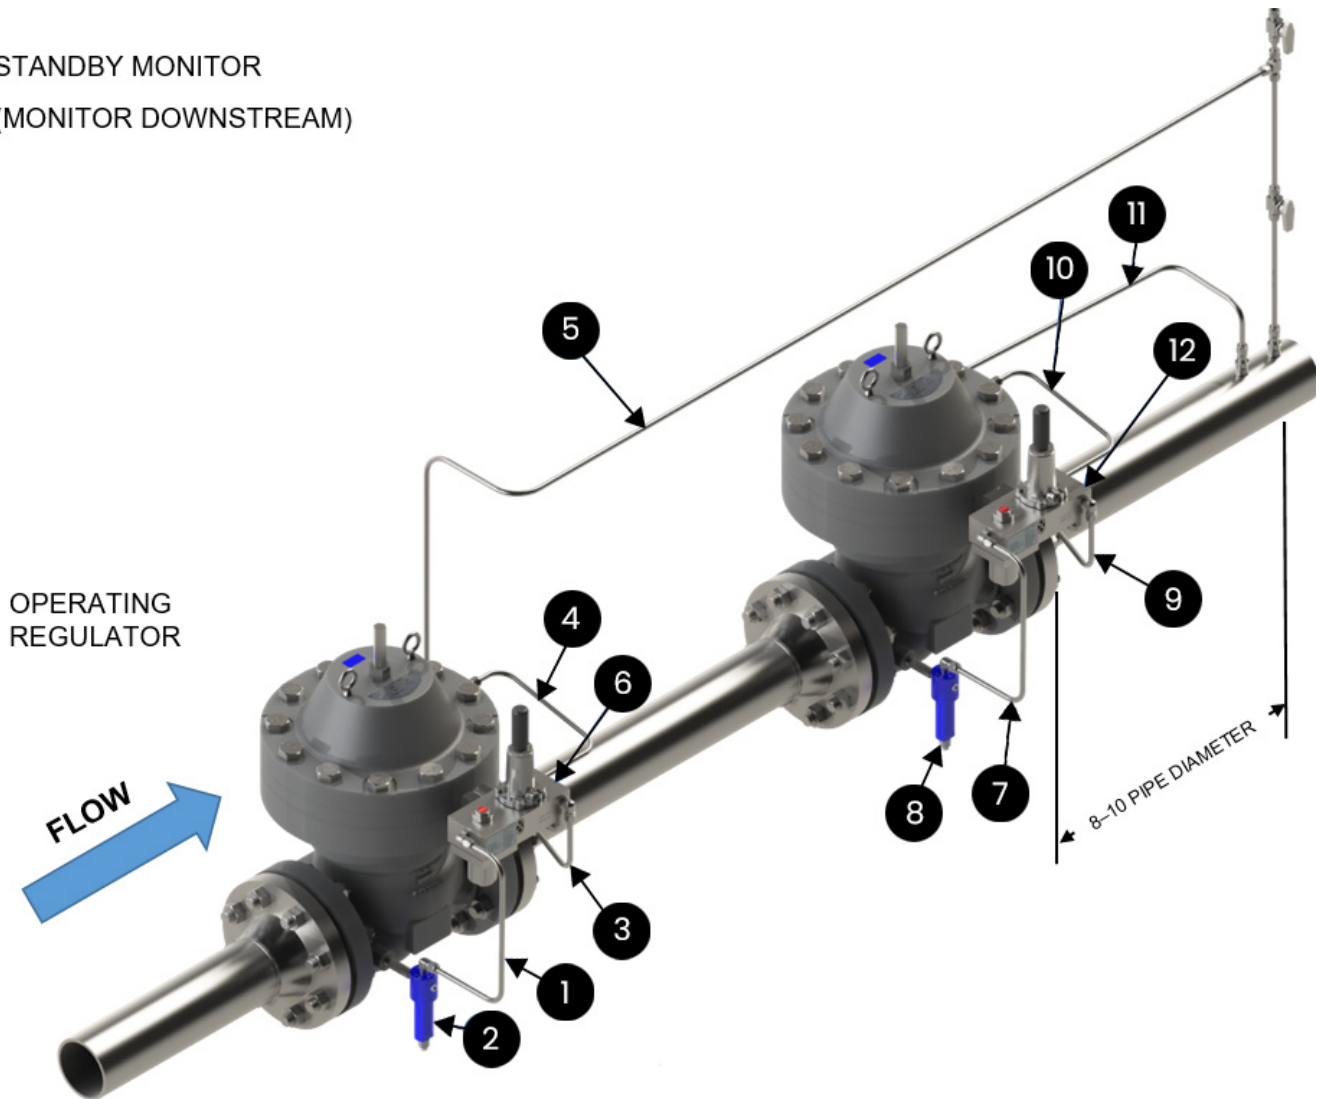

1. Pilot supply tubing from filter OUTLET to Series 22 pilot INLET port.
2. Type 30 Filter mounted in inlet piping.
3. LOADING Port of Series 22 pilot connected to the loading connection on the actuator housing of the FlowMax HP regulator.
4. Sense line connecting the SENSE port on the Series 22 pilot to the sense port on the FlowMax HP actuator.
5. Sense line connecting the FlowMax HP regulator to the downstream piping. (Refer to Table 4 on Page 5 for sense piping recommendations)
6. Series 22 pilot with pilot cartridge in PRV mode.
7. Pilot supply tubing from filter OUTLET to Series 22 pilot INLET port.
8. Type 30 filter mounted in inlet piping.
9. LOADING port of Series 22 pilot connected to the Loading connection on the actuator housing of the FlowMax HP regulator.
10. Sense line connecting the SENSE port on the Series 22 pilot to the sense port on the FlowMax HP actuator.
11. Sense line connecting the FlowMax HP actuator to the downstream piping.
12. Series 22 pilot with pilot cartridge in PRV mode.

Piping Schematics (cont'd)


3. Stand-by Monitor (Monitor located upstream)

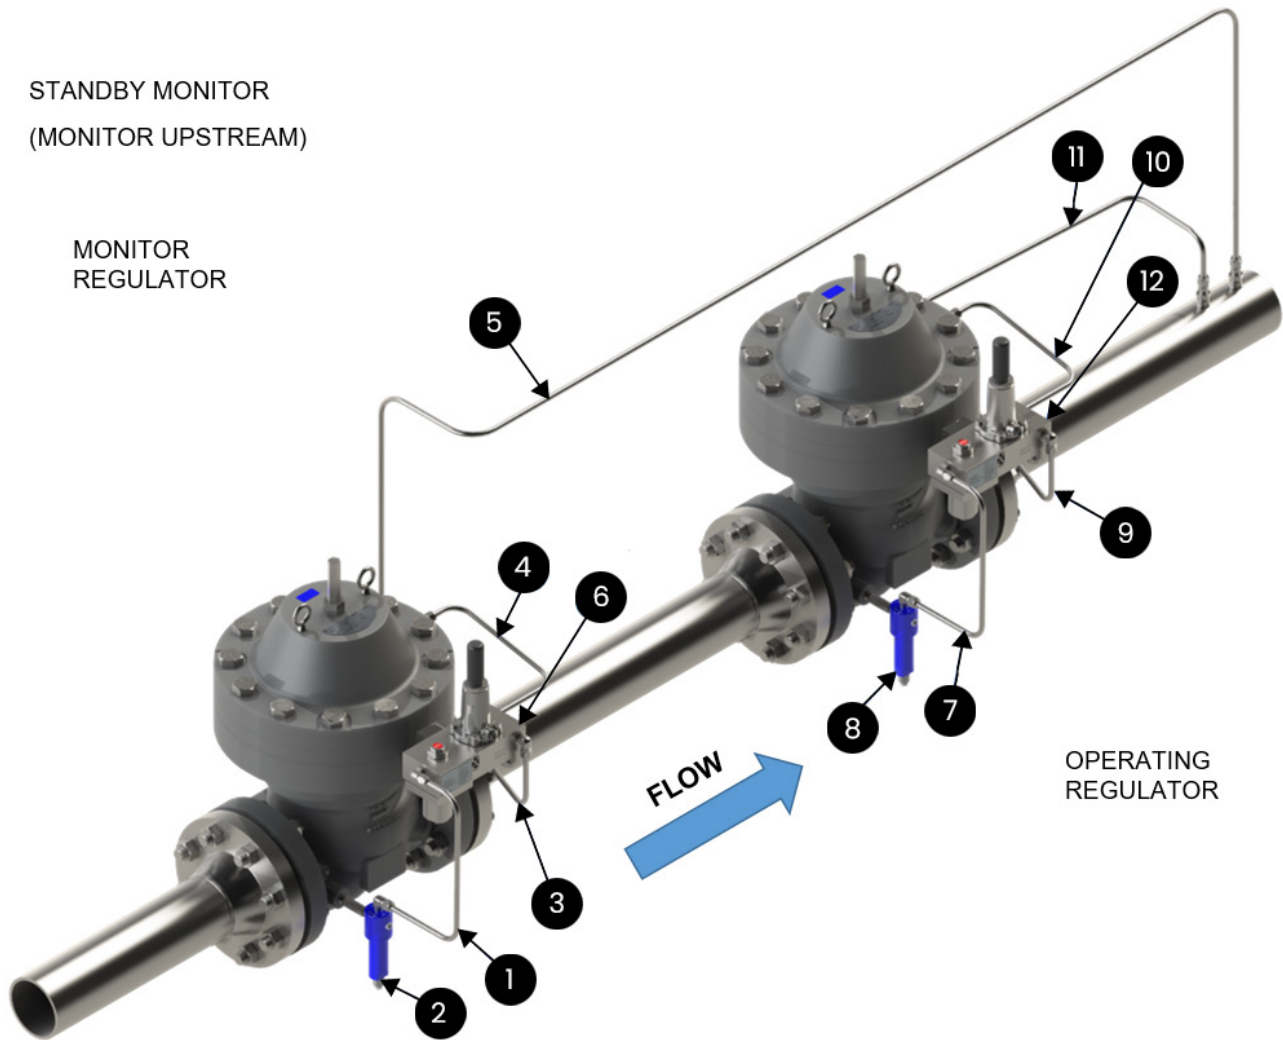

1. Pilot supply tubing from filter OUTLET connection to Series 22 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. LOADING port of Series 22 pilot connected to the Loading connection on the actuator housing of the FlowMax HP regulator.
4. Sense line connecting the SENSE port on the Series 22 pilot to the sense port on the FlowMax HP actuator.
5. Sense line connecting the FlowMax HP actuator to the downstream piping. (Refer to Table 4 on Page 5 for sense piping recommendations)
6. Series 22 pilot with pilot cartridge in PRV mode.
7. Pilot supply tubing from filter OUTLET connection to Series 22 Pilot INLET port.
8. Type 30 filter mounted in inlet piping.
9. LOADING port of Series 22 pilot connected to Loading connection on the actuator housing of the FlowMax HP regulator.
10. Sense line connecting SENSE port on Series 22 pilot to the sense port on the FlowMax HP actuator.
11. Sense line connecting the FlowMax HP actuator to the downstream piping.
12. Series 22 pilot with pilot cartridge in PRV mode.

Piping Schematics (cont'd)

4. Working Monitor Set

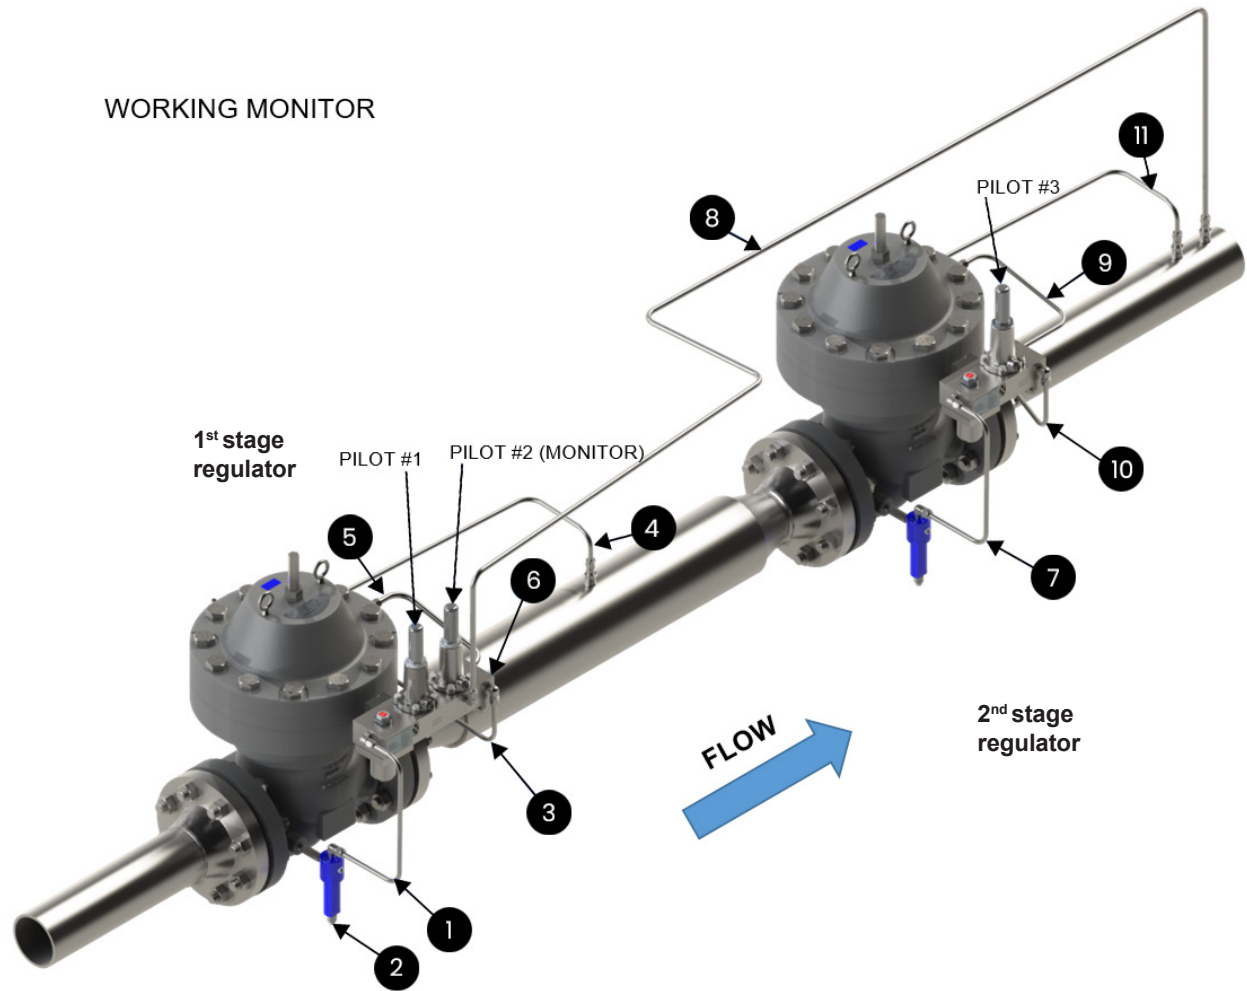

1. Pilot supply tubing from filter OUTLET connection to Series 22 pilot (#1) INLET port.
2. Type 30 filter mounted in the inlet piping.
3. Pilot #2 LOADING port connected to the loading connection on the actuator housing of the FlowMax HP regulator.
4. Sense line connecting the 1st stage FlowMax HP regulator to the interstage piping. (Refer to Table 4 on Page 5 for sense piping recommendations)
5. Sense line connecting SENSE port on Series 22 pilot (#2) to the sense port on the FlowMax HP actuator.
6. Series 22 pilot with pilot cartridge in PRV mode.
7. Pilot supply tubing from filter OUTLET connection to Series 22 pilot (#3) INLET port.
8. Sense line connecting the SENSE port on the monitor pilot (#2) to the downstream piping.
9. Sense line connecting SENSE port on Series 22 pilot (#3) to the sense port on the FlowMax HP actuator.
10. LOADING port of Series 22 pilot (#3) connected to the loading connection on the actuator housing of the FlowMax HP regulator.
11. Sense line connecting the 2nd stage FlowMax HP regulator to the downstream piping.

Start-up and Operation

The following procedures are suggested for start-up of the FlowMax HP regulator equipped with Series 22 pilots. Start-up of the FlowMax HP regulator should be made by trained, qualified personnel familiar with high pressure systems and pilot-operated regulators.

WARNING

The instruction manual for the PILOT(S) being used should be consulted to insure that the installation and start-up instructions for the pilot are followed. Some equipment can be damaged if not installed and put into operation correctly.

Single Pressure Reducing Regulator

1. Back off the pilot adjusting screw to fully remove the spring compression.
2. Slowly open the upstream block valve to pressurize the FlowMax HP regulator and pilot system. The regulator should lock up (shut off) with zero pressure downstream.
3. Fully open any hand valve(s) in the control line(s) and the pilot supply line.
4. Slightly open a downstream block valve or open a vent in piping downstream of the FlowMax HP regulator.
5. Slowly increase the pilot spring setting until the desired downstream pressure is achieved.
6. Slowly close the downstream block valve or vent to check the FlowMax HP regulator for lockup (shut off).
7. Slowly open the downstream block valve to allow full flow.

Stand-by Monitor

(Upstream Operating Regulator Configuration)

This procedure is based on the first regulator being the Operating regulator and the second regulator being the Monitor regulator.

Note: In this configuration, installation of a shut-off valve and a vent valve are required in the sense line of the operating regulator to facilitate testing of the monitor regulator performance. See Page 7.

1. If necessary, purge any pressure in the station.
2. Set operating regulator pilot (#1) spring at the MAXIMUM setting. The sense line shut-off valve should be closed and the sense line vent valve should be open.
3. Set monitor pilot (#2) spring to the MINIMUM (zero) setting.
4. Slowly open the inlet block valve. Full inlet pressure should be present at the monitor regulator and the Monitor regulator should be closed.
5. Open any hand valve(s) in the pilot supply lines on both regulators. The sense line shut-off valve should remain closed and the sense line vent valve should remain open (Refer to page 7).
6. Open a vent or downstream block valve.
7. Increase the pilot spring setting of the monitor regulator until the desired monitor override setting is reached. Lock in the pilot setting.

8. With some flow going through the station, close the vent valve on the operating regulator sense line and open the shut-off valve on the same line. Start to lower the Pilot setting of the operating regulator until the desired outlet pressure is achieved.

Note: When the set point of the operating regulator becomes less than the set point of the monitor regulator, the interstage pressure will drop from approximately full inlet pressure to 5-10 psi (0.34-0.68 bar) above the outlet pressure at low flow rates.

Checking Stand-by Monitor Operation

1. With flow going through the station, slowly open the vent valve installed in the operating regulator sense line while closing the shut-off valve in the same line. The outlet pressure should begin to rise as the operating regulator goes wide open. When the pressure reaches the setpoint of the monitor regulator, the monitor should take control and the interstage pressure should increase to approximately full inlet pressure.
2. Return the system to normal operation by reversing the process with the vent valve being closed while the shut-off valve is returned to the open position. The interstage pressure should drop to 5-10 psi (0.34-0.68 bar) above the outlet pressure as the operating regulator regains control (at low flows).

Stand-by Monitor

(Upstream Monitor Regulator Configuration)

This procedure is based on the first stage regulator being the Monitor regulator and the second stage regulator being the Operating regulator.


1. If necessary, purge any pressure in the station.
2. Set first stage monitor regulator pilot spring at the MAXIMUM setting.
3. Set second stage operating regulator pilot spring to the MINIMUM (zero) setting.
4. Slowly open the inlet block valve. Full inlet pressure should be present at the second stage operating regulator and it should be closed.
5. Fully open any hand valve(s) in the control line(s) and the pilot supply line.
6. Open a vent or downstream block valve.
7. Increase the set point of the second stage operating regulator to the desired monitor over-ride set pressure.
8. Decrease the pilot spring setting of the first stage monitor regulator until it takes control at a set point just below the final desired monitor over-ride set pressure.
9. Increase the second stage operating regulator to the maximum pilot setting.
10. Increase the first stage monitor regulator set pressure to the final desired monitor over-ride set point.
11. Decrease the pilot spring setting of second stage operating regulator until the final set point is achieved.

Note: When the set point of the operating regulator becomes less than the set point of the monitor regulator, the interstage pressure will rise to 5-10 psi (0.34-0.68 bar) below the full inlet pressure (at low flows).

Checking Stand-by Monitor Operation

1. With flow going through the station, slowly increase the setting of the operating regulator. When the pressure reaches the setpoint of the monitor regulator, the monitor should take control and the interstage pressure should decrease to approximately 5-10 psi (0.34-0.68 bar) above the outlet pressure.
2. Reduce the setting of the operating regulator back to the required outlet pressure. The interstage pressure should increase to 5-10 psi (0.34-0.68 bar) below the inlet pressure as the operating regulator regains control (at low flows).

WORKING MONITOR

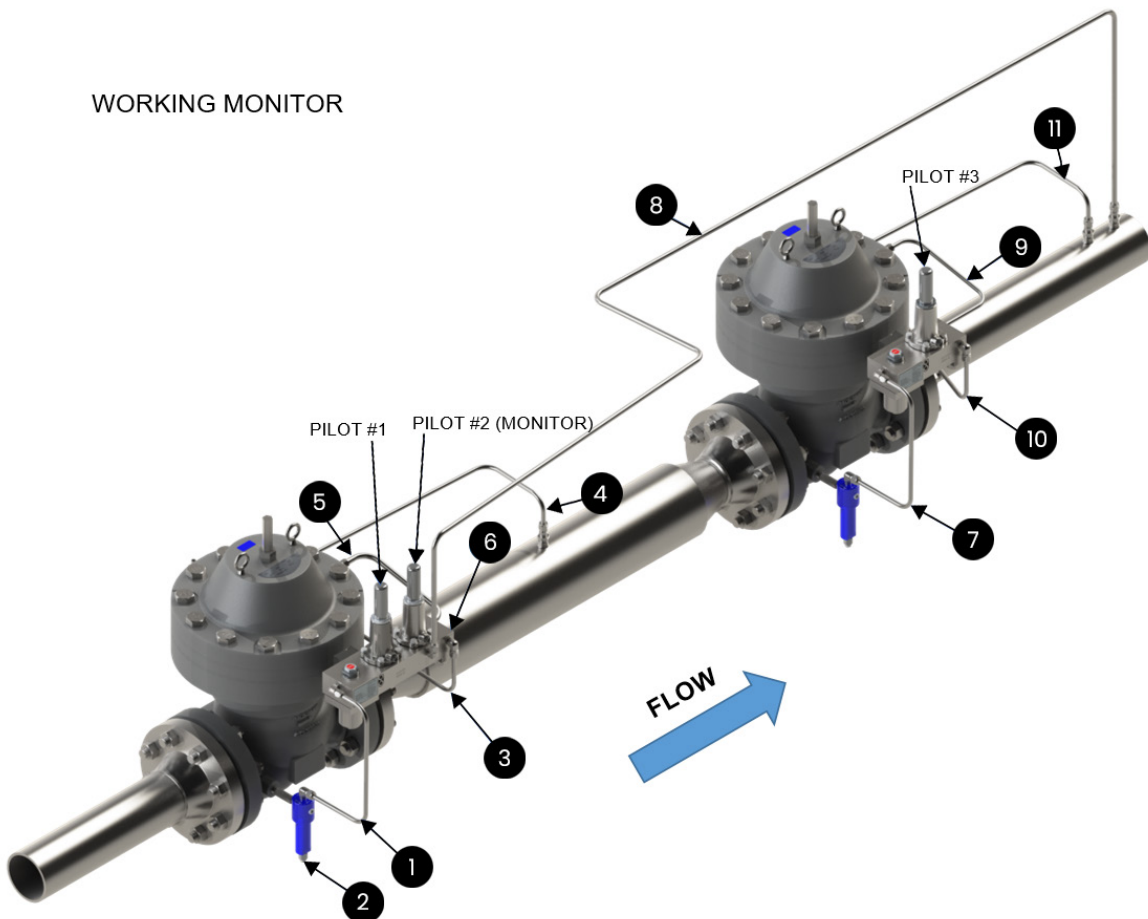


Working Monitor

1. Purge any pressure in the station.
2. Set pilots #1 and #2 to a setting above the desired set points.
3. Set the pilot (#3) at a zero setting.
4. Slowly open the inlet block valve to station. The second stage regulator should remain closed as a result of the pilot #3 being set to zero.
5. Fully open any hand valve(s) in the control line(s) and the pilot supply line.
6. Open an outlet block valve or vent to allow flow through the station.
7. Increase the setting of the second stage regulator, pilot (#3) to the desired monitor over-ride pressure set point of the station.
8. Lower the setpoint of the first stage regulator pilot (#1) to the desired interstage pressure setting. The first stage regulator should begin to control the interstage pressure at the setpoint of Pilot #1.
9. Lower the setpoint of pilot #2 to take control of the system (a pressure that will be slightly lower than the final monitor over-ride pressure).
10. Raise the setpoint of pilot #3 to a maximum setting.
11. Raise the setpoint of pilot #2 to maintain the exact monitor over-ride pressure set point.
12. Lower pilot #3 to the desired station outlet pressure.


Maintenance

1.0 Partial Disassembly for Plug/Seat Insert and Plug/Seat Inspection and Replacement


- 1.1 Disconnect all tubing to the Actuator. The Series 22 Pilot block can remain attached to the Adapter Housing and does not need to be removed for this procedure.

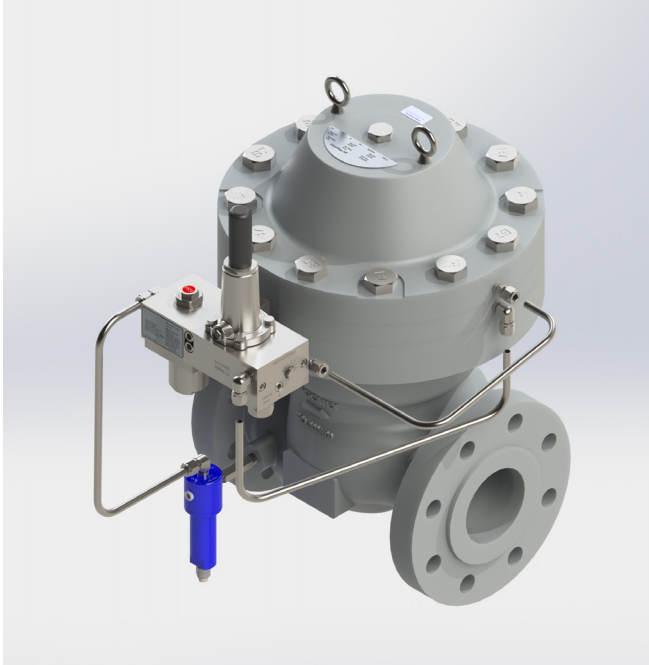

- 1.2 With the exception of the four cap screws that are recessed into the Upper Actuator Housing, loosen and remove the remaining cap screws that hold the Actuator housing to the Adapter housing.

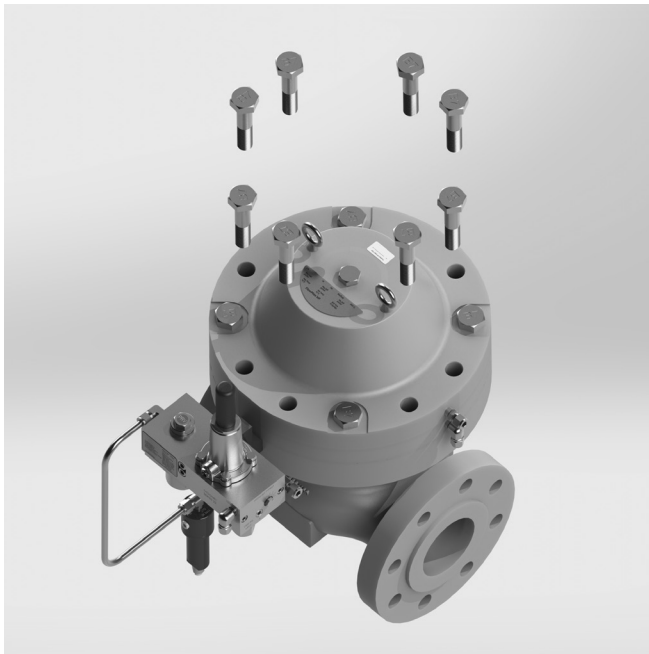

- 1.3 Use lifting eyes to remove the Actuator assembly by lifting straight up. DO NOT PRY.

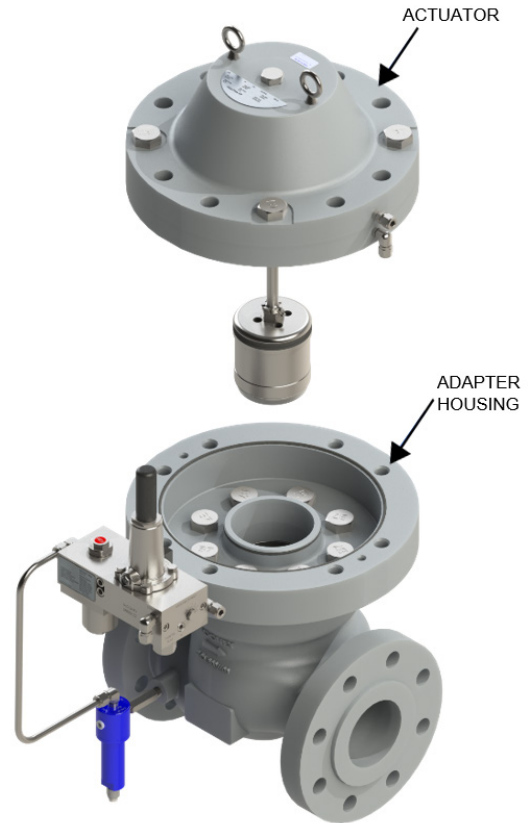


- 1.4 The adapter housing does not need to be removed.
- 1.5 Inspect the Seat Insert and Plug Seal for nicks, scratches or other damage that may be visible.




- 1.6 If necessary, the Plug assembly can be disassembled at this point and the Seat Insert can be replaced.
- 1.7 To disassemble the Plug assembly, remove the Cotter Pin as shown in the figure below and loosen the Castle

Nut on top of the Plug. Be sure to use a wrench on the Stem flats to avoid twisting the Stem assembly during removal of the Castle Nut.

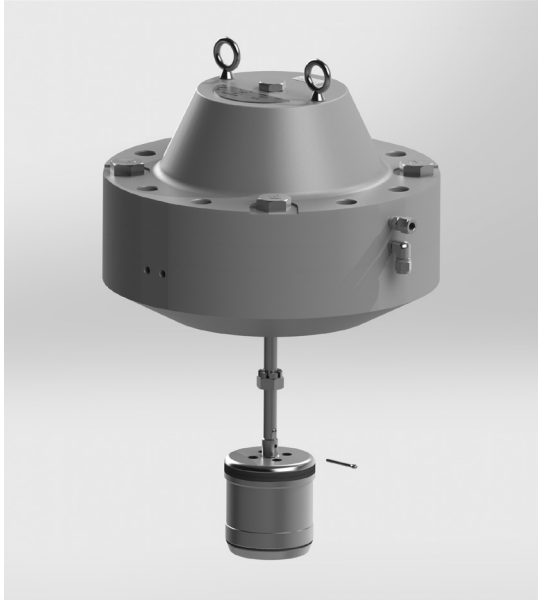

- 1.8 Once the Castle Nut is loosened, the Plug and Castle Nut can be moved up the Stem and the Set screw on the Plug skirt will be exposed.

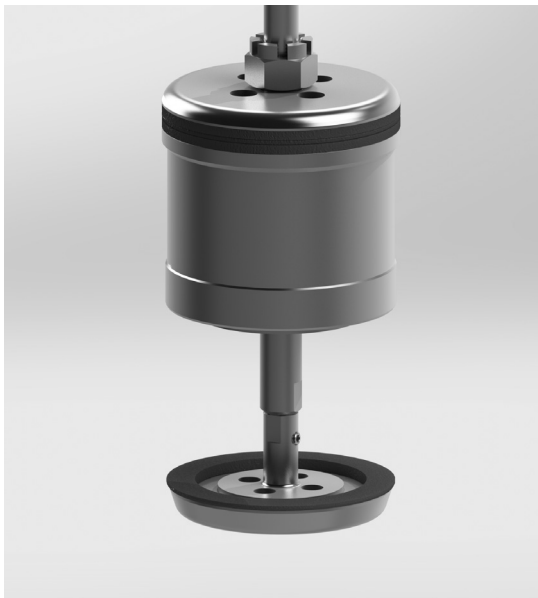


- 1.9 After loosening the Plug skirt Set screw, the Plug skirt can be unscrewed from the Stem and the Seat Insert can

be replaced. Be sure to use wrench flats on Plug skirt and Stem to avoid twisting the Stem assembly.



2.0 Partial assembly for Plug/Seat Insert Inspection and Replacement

- 2.1 With the Plug and Castle Nut slid up on the Stem, place the new Seat Insert onto the Plug skirt and screw the Plug skirt onto the Stem until tight. Tighten as per Table 5
- 2.2 Tighten the Plug skirt set screw and slide the Plug against the Seat Insert.
- 2.3 Slid the Castle Nut down the shaft and engage threads. The Castle Nut can be tightened by hand but, prior to wrench tightening, place a separate wrench on the Stem wrench flats to prevent rotation while tightening the Castle Nut.
- 2.4 Tighten the Castle Nut to the torque as listed in Table 5 noting that the Castle Nut must line up with the hole in the Stem for proper insertion of the Cotter Pin.

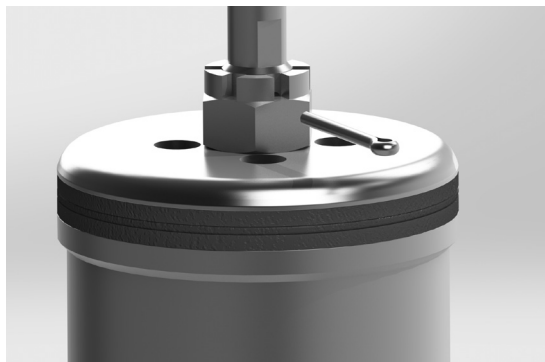


- 2.5 Insert Cotter Pin and bend the ends at least 90 degrees to maintain proper locking action.

- 2.6 If replacing the Plug Seal, install it at this time. The Plug Seal consists of three components and should be installed as noted in the figure below –




- 2.7 Prior to reinstalling the Actuator assembly onto the Adapter housing, clean and inspect the Adapter housing O-ring and groove as noted below. Replace if necessary.

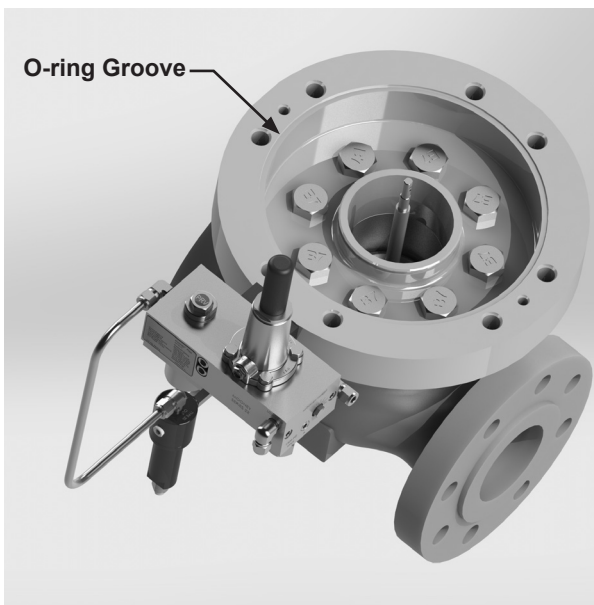

- 2.8 Apply Parker™ O-lube to the Wedgepak seals on the Plug Seal and the Adapter O-ring prior to lowering the Actuator into position.

- 2.9 While lowering the Actuator Housing, care should be taken to assure that the unit is centered and that the Plug Seal slides properly into place as the unit is lowered.

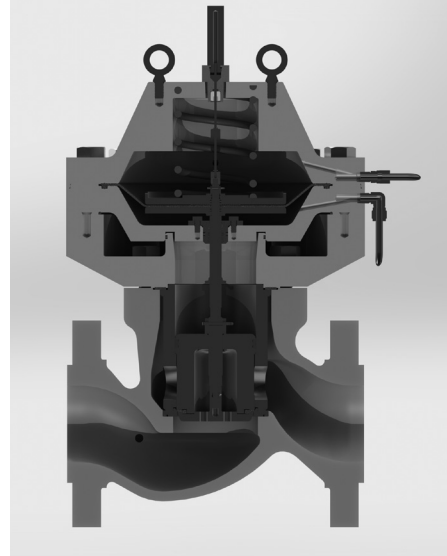

- 2.10 The inner diameter of the Adapter Housing has a slight taper which acts to compress the Plug Seal as it slides into place.
- 2.11 A slight clicking sound can be heard as the plug seal transitions from the Adapter housing into the valve Cage.
- 2.12 Once the Actuator is properly seated, the Cap Screws can be re-installed and torqued to specified levels (see Table 5). Always torque the Cap Screws in a crisscross pattern.
- 2.13 Reconnect the tubing.
- 2.14 Pressure test for leaks prior to returning to service.

3.0 Diaphragm and Seal Pack Inspection and Replacement

Note: The procedure assumes that the Lower Actuator Housing will remain on the Adapter throughout the process. Disassembly and Inspection can also be performed with the Actuator assembly removed as described in Section 1.0. Care should be taken to protect the Stem and Plug if removed from the Adapter housing to prevent bending and any other damage.

- 3.1 Disconnect the Sense and Loading tubing to the Actuator. The Series 22 Pilot block can remain attached to the Adapter housing and does not need to be removed for this procedure.



- 3.2 Remove all the Cap Screws holding the Upper Actuator Housing to the Lower Actuator Housing.
- 3.3 Disconnect Travel Indicator shaft from Stem by pressing down on shaft and rotating in a counter-clockwise direction. Travel Indicator Stem should be free to move up and down.




- 3.4 Using proper lifting points, lift the Upper Actuator Housing off the unit.

- 3.5 Remove the Spring and Travel Indicator shoe. The Travel Indicator shoe is threaded onto the Stem.



- 3.6 Remove the upper Cotter Pin.

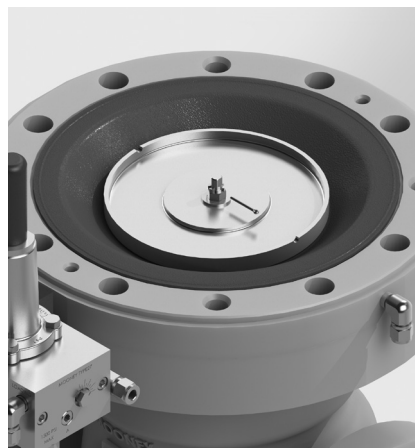

- 3.7 While using the wrench flats on the top of the Stem to hold it in place, unscrew the upper Castle Nut from the Stem.
- 3.8 Remove the Upper Diaphragm Support plate. **Note:** The Upper Diaphragm Support plate has an internal O-ring that should be inspected and replaced if necessary.




3.9 Remove the Diaphragm and inspect for any bubbles, cracking or other damage that may be present. Replace if necessary.

3.10 Remove the Lower Diaphragm Support plate.


Note: The Lower Diaphragm Support plate also has an internal O-ring that should be inspected and replaced if necessary.

3.11 The Seal Pack is held in place by four Cap Screws. Remove the four Cap Screws and remove the Cover Plate. Two threaded holes are used for jacking or lifting the Seal Pack out as a complete unit.

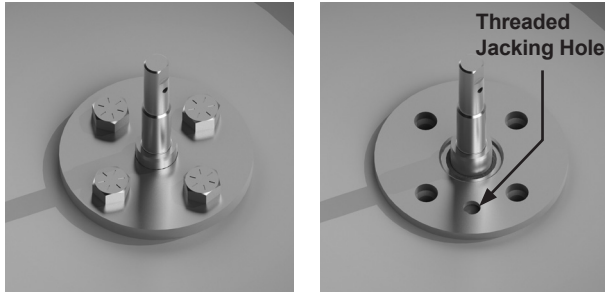

3.12 Thread two of the Seal Pack cap screws into the extra holes and tighten to lift the Seal Pack out of the Lower Actuator Housing.


3.13 Due to the difficulty in replacing the Seal Pack's internal Stem Seal, it is recommended that the Seal Pack be replaced as a complete unit.

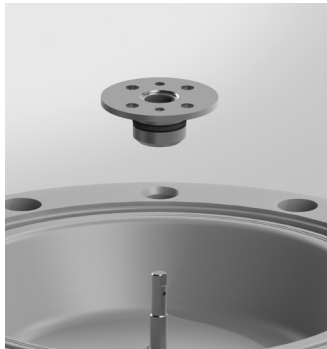

3.14 If inspection of Plug Seal and Seat Insert are being performed, the Lower Diaphragm Housing can be removed - exposing the Plug assembly.

3.15 If Lower Diaphragm Housing is difficult to remove, two cover bolts may be inserted into opposite threaded holes on the Housing and used as jacking screws.

3.16 Attach Lift Eyes to two threaded holes in housings and lift vertically.

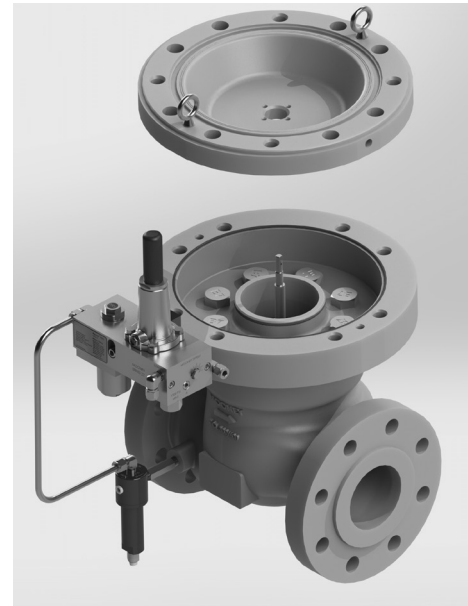

3.17 Inspect and replace O-ring in Adapter Housing.



3.18 Plug assembly may be removed by lifting Stem. Plug will experience a click when the Plug Seal transitions from the cage to the Adapter Housing. Force may be required to move the Plug assembly past this point.

Note: Adapter Housing does not need to be removed.

3.19 Remove Cotter Pin and remove the Castle Nut.

3.20 Remove Plug. Set Screw in Plug Skirt does not need to be removed.

3.21 Replace Seat Insert.

3.22 Replace Plug.


3.23 Install Castle Nut and tighten as per Table 5. Use wrench flats to hold part and prevent the assembly from turning.

3.24 Install Cotter Pin and deform at least 90 degrees for proper locking.

- 3.25 Apply Parker o-lube and install Plug assembly into Cage. Plug will stick at transition, keep pushing.



- 3.26 Install Lower Diaphragm Housing.
- 3.27 Assembly is done in the reverse order. Lube all O-rings with Parker O-lube prior to reassembly.
- 3.28 Install Seal Pack Housing by sliding Seal Pack assembly onto Stem and then sliding into the Lower Diaphragm Housing. Install Seal Pack Cover.
Note: The Stem has a taper which allows for easy installation of the Stem Seals.
- 3.29 Torque the Seal Pack Cap Screws to specified levels (see Table 5) and manually move the Stem through a few cycles to assure proper alignment prior to attaching the Diaphragm and Diaphragm Support Plates.

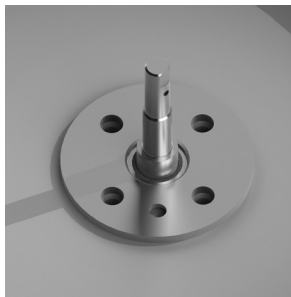

- 3.30 Install Lower Diaphragm Support plate, Diaphragm, and Upper Support plate.
- 3.31 Slide the Castle Nut onto the Stem shaft and engage threads. The Castle Nut can be tightened by hand but, prior to wrench tightening, place a separate wrench on the Stem wrench flats to prevent rotation while tightening the Castle Nut.
- 3.32 Tighten the Upper Castle to the torque as listed in Table 5 noting that the Castle Nut must line up with the hole in the Stem for proper insertion of the Cotter Pin.
- 3.33 Insert Cotter Pin and bend the ends to at least 90 degrees to maintain proper locking action.
- 3.34 Thread the Travel Indicator shoe onto the Stem and tighten while holding the stem from turning using a wrench across the provided flats.
- 3.35 Set and center the Spring on the Upper Diaphragm Support plate prior to lowering the Upper Actuator Housing onto the assembly.

- 3.36 Ensure that the Diaphragm bead is sitting in the groove of the Lower Actuator Housing.
- 3.37 Lower and bolt the Upper Actuator Housing to the recommended torque specification.
- 3.38 Reattach the Travel Indicator by pressing down on the Indicator stem and turning in clockwise direction. Travel Indicator should be locked to the Stem and should not be loose to move up and down.
- 3.39 Reconnect the Sense and Loading tubing.
- 3.40 Pressure test for leaks prior to returning to service.


4.0 Seat Ring and Cage Inspection and Replacement

- 4.1 Disconnect the Inlet, Sense, and Loading tubing to the Actuator. The Series 22 Pilot block can remain attached to the Adapter Housing and does not need to be removed for this procedure.
- 4.2 With the exception of the four Cap Screws that are recessed into the Upper Actuator Housing, loosen and remove the remaining Cap Screws that hold the Actuator Housing to the Adapter Housing as shown below.




- 4.3 Remove the Actuator assembly by lifting straight up. DO NOT PRY.

- 4.4 Remove the Adapter Housing Cap Screws and lift the Adapter Housing using the provided lifting holes.

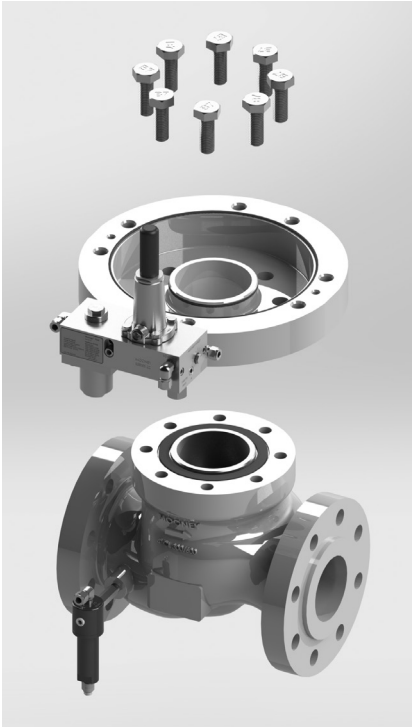


- 4.5 Remove the Upper Crush Gasket and lift the Cage from the Body. Clean and inspect the Cage for any sign of abrasive wear or damage.
- 4.6 Remove the Seat Ring and Lower Crush Gasket. Inspect the Seat Ring for any sign of abrasive wear or damage. Replace if necessary. Due to the close fit between the Seat and Cage, the Seat may require prying to remove it from the cage.

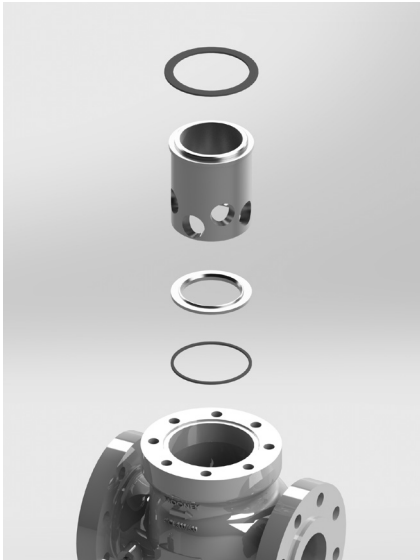

- 4.7 Insert Lower Crush Gasket.
Note: The two Crush Gaskets are not re-usable and must be replaced if the Adapter Housing is removed during teardown and reassembly.

- 4.8 Insert the Seat Ring, Cage and Upper Crush Gasket.
- 4.9 Position the Adapter Housing in place on top of the Upper Crush Gasket and install Cap Screws.
Note: The torquing of the Adapter Housing Cap Screws is critical to setting the Upper and Lower Crush Gaskets and must be done in an even crisscross manner to provide even force for setting the gaskets. Torque should be applied in intervals of 1/3 the final torque, 2/3 final torque and final torque.
- 4.10 Torque Adapter Housing Cap Screws to specified levels (see Table 5).
- 4.11 Prior to reinstalling the Actuator assembly onto the Adapter Housing, clean and inspect the Adapter Housing O-ring as noted in the figure below. Replace if necessary.

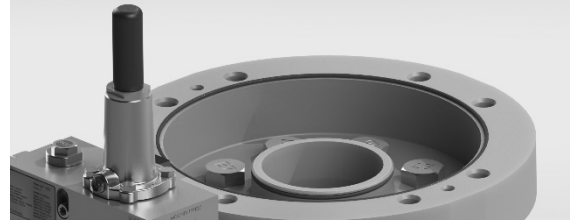

- 4.12 Apply Parker O-lube to the Plug Seal and the Adapter O-ring prior to lowering the Actuator into position.
- 4.13 While lowering the Actuator housing, care should be taken to assure that the unit is centered and that the Plug Seal slides properly into place as the unit is lowered.
- 4.14 The inner diameter of the Adapter Housing has a slight taper which acts to compress the Plug Seal as it slides into place.
- 4.15 A slight clicking sound can be heard as the Plug Seal transitions from the Adapter Housing into the valve Cage.
- 4.16 Once the Actuator is properly seated, the Cap Screws can be re-installed and torqued to specified levels (see Table 5). Always torque the Cap Screws in a crisscross pattern.
- 4.17 Reconnect the Inlet, Sense and Loading tubing.
- 4.18 Pressure test for leaks prior to returning to service.

| FlowMax HP Bolting Torques Lb-Ft (n-m) | | | | |
|--|-----------|-----------|-----------|-----------|
| | 2" | 3" | 4" | 6" |
| Actuator Cap Screws | 96 (130) | 165 (224) | 250 (340) | 380 (515) |
| Stem Nut | 8 (11) | 8 (11) | 8 (11) | 11 (15) |
| Adapter Housing Cap Screws | 165 (224) | 165 (224) | 250 (340) | 380 (515) |
| Plug Nut | 18 (25) | 18 (25) | 18 (25) | 22 (30) |
| Seal Pack Bolts | 8 (11) | 8 (11) | 8 (11) | 14 (19) |

Table 5

Troubleshooting

| Problem | Solution |
|---------------------------------|---|
| The regulator will not shut-off | <ol style="list-style-type: none"> 1. Verify the gap between the actuator and body is equal around its diameter 2. Check actuator to body bolts - tighten if necessary 3. Check the pilot for excess friction ("sticking open") 4. Check main spring 5. Check the plug seal for damage 6. Check the seat for any nicks or damage to the sealing surface 7. Check for damage to the seat O-ring 8. Check for obstructions in the internal plug holes |
| Regulator will not open | <ol style="list-style-type: none"> 1. Check if any valves in the sense line are not fully open 2. Check the pilot set point 3. Check that existing piping matches the piping schematics 4. Check for binding 5. Check the main diaphragm for damage |
| Erratic Behavior | <ol style="list-style-type: none"> 1. Check the location of the sense line (away from pipes, fittings, and other turbulent locations) 2. Check that the size of the sense line is adequate 3. Check if any valves in the sense line are not fully open 4. Check the pilot for excess friction ("sticking") 5. Check for excess friction in the actuator |

Notes

Notes

Direct Sales Office Locations

Australia

Brisbane
Phone: +61-7-3001-4319

Perth
Phone: +61-8-6595-7018

Melbourne
Phone: +61-3-8807-6002

Brazil

Phone: +55-19-2104-6900

China

Phone: +86-10-5738-8888

France

Courbevoie
Phone: +33-1-4904-9000

India

Mumbai
Phone: +91-22-8354790

New Delhi

Phone: +91-11-2-6164175

Italy

Phone: +39-081-7892-111

Japan

Tokyo
Phone: +81-03-6871-9008

Korea

Phone: +82-2-2274-0748

Malaysia

Phone: +60-3-2161-03228

Mexico

Phone: +52-55-3640-5060

Russia

Veliky Novgorod
Phone: +7-8162-55-7898

Moscow

Phone: +7-495-585-1276

Saudi Arabia

Phone: +966-3-341-0278

Singapore

Phone: +65-6861-6100

South Africa

Phone: +27-11-452-1550

**South & Central
America and the Caribbean**

Phone: +55-12-2134-1201

Spain

Phone: +34-935-877-605

United Arab Emirates

Phone: +971-4-8991-777

United Kingdom

Phone: +44-7919-382-156

United States

Houston, Texas
Phone: +1-713-966-3600

Find the nearest local Channel Partner in your area:

valves.bakerhughes.com/contact-us

Tech Field Support & Warranty:

Phone: +1-866-827-5378

valvesupport@bakerhughes.com

valves.bakerhughes.com

Copyright 2021 Baker Hughes Company. All rights reserved. Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information. The Baker Hughes logo, FlowMax and Mooney are trademarks of Baker Hughes Company. Other company names and product names used in this document are the registered trademarks or trademarks of their respective owners.

Baker Hughes 